SCORPION DC Series Installation Guide

Thanks for choosing our Avoca DC Series ceiling fan. We strongly recommend that you read this manual carefully before installation.



Models Paramete	ers (Fan Only):-
MSDC133M	1320mm 3 Blade Ceiling Fan Matt Black
MSDC133W	1320mm 3 Blade Ceiling Fan Matt White
MSDC133GC	1320mm 3 Blade Ceiling Fan Matt Silver/Carbon Fibre
MSDC103M	1050mm 3 Blade Ceiling Fan Matt Black
MSDC103W	1050mm 3 Blade Ceiling Fan Matt White
MSDC103GC	1050mm 3 Blade Ceiling Fan Matt Silver/Carbon Fibre

Models Parameters (Fan and LED Light):-

	(°
MSDC1333M	1320mm 3 Blade Ceiling Fan Matt Black with 20W LED Light
MSDC1333W	1320mm 3 Blade Ceiling Fan Matt White with 20W LED Light
MSDC1333GC	1320mm 3 Blade Ceiling Fan Matt Silver/Carbon Fibre with 20W LED Light
MSDC1033M	1050mm 3 Blade Ceiling Fan Matt Black with 20W LED Light
MSDC1033W	1050mm 3 Blade Ceiling Fan Matt White with 20W LED Light
MSDC1033GC	1050mm 3 Blade Ceiling Fan Matt Silver/Carbon Fibre with 20W LED Light


Part List:

Qty 1x motor assembly	
Qty 1x hanging bracket	


Qty 1x instruction manual
Qty 1x wall control kit

Qty 1x screw kit Qty 3x blades Qty 1x balancing kit

Application

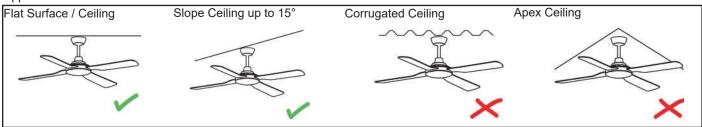


How to Assemble

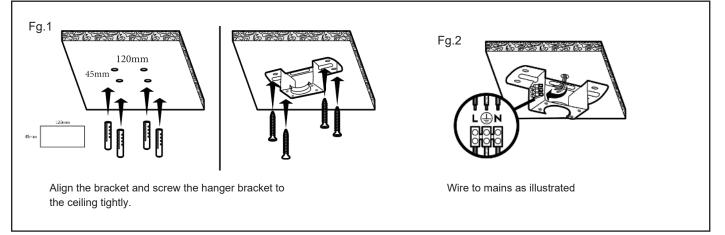




WARNING Installation MUST carry out by a qualified and licensed electrician.


How to Install Blades

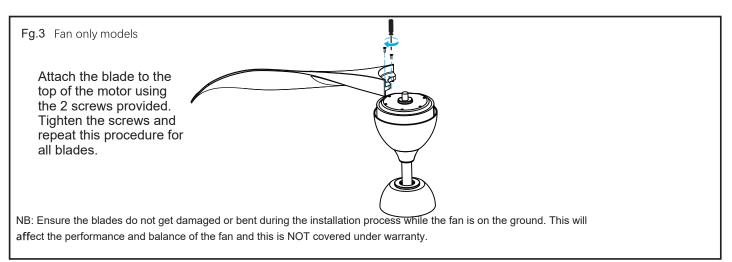

How to Install Blades

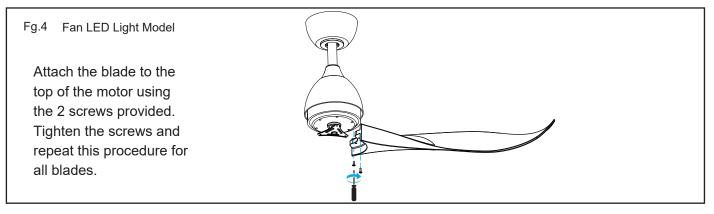


How to Install

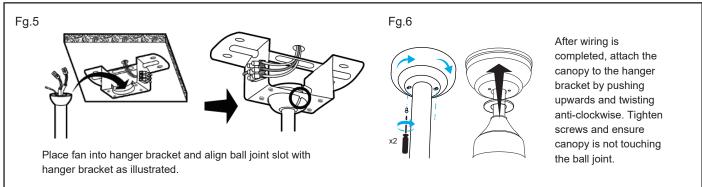




WARNING Installation MUST carry out by a qualified and licensed electrician.


How to Install Light Plate

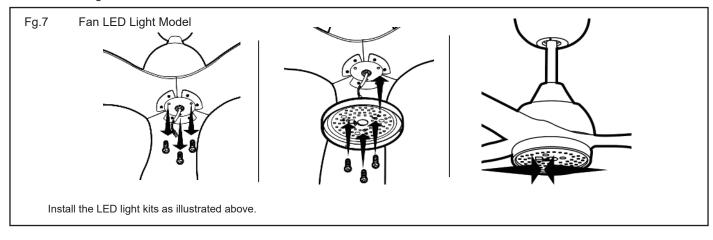

How to Install / Remove the Cover

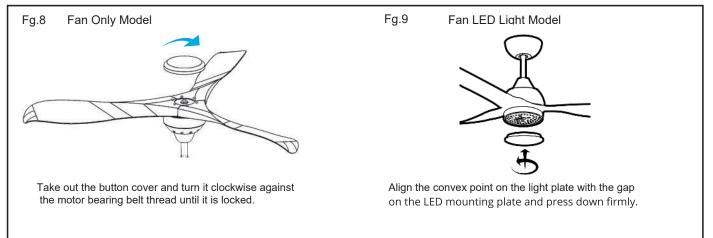

Installing Receiver Remote Control

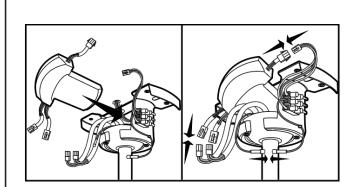

Wire up the receiver with quick connectors and insert into the mounting bracket. Make sure the antenna wire has been safely folded inside the canopy cover before final assembly. (DO NOT cut the antenna wire)

Important Reminders

- Receiver must be correctly installed in the mounting bracket
- When the transmitter cannot control the receiver, please check
 - i) has sufficient battery in the transmitter
 - ii) any existence of similar remote
 - controlled products nearby that cause interference
- Replace battery if getting low as this will affect sensitivity of the transmitter
- Take the battery out from the transmitter when leaving used for a long time to avoid battery leaks
- Isolation switch MUST be connected in the line



WARNING Installation MUST carry out by a qualified and licensed electrician.

WiFi / Remote Control Pairing

Fan only model		Fan LED Light Model	
 Pairing the remote control 1. Turn on the ceiling fan. 2. Within the first 20 seconds, continue pressing the button until you hear a "beep" sound. ie. It is paired. If you don't hear a "beep" sound, repeat step 1 and step 2 again. 		 Pairing the remote control 1. Turn on the ceiling fan. 2. Within the first 20 seconds, continue pressing the button until you hear a "beep" sound. ie. It is paired. If you don't hear a "beep" sound, repeat step 1 and step 2 again. 	
 Entering WiFi Pairing mode: 1.Turn on the power. 2.Within the first 20 seconds, press and hold the " " button until a "beep" is heard. 3.Continue step connect on your smart devices to complete the pairing. If you don't hear a "beep" sound, repeat the above 	1h 4h 8h /// MARTEC	 Entering WiFi Pairing mode: 1.Turn on the power. 2.Within the first 20 seconds, press and hold the " ' ' button until a "beep" is heard. 3.Continue step connect on your smart devices to complete the pairing. If you don't hear a "beep" sound, repeat the above 	1h 4h 8h /// MARTEC steps.
 FAN OFF (): to switch off the fan. SLEEP MODE : Turn on the fan at an extra loc create a general breeze. SPEED BUTTON: 1 = lowest speed. 6 = highest speed. BUTTON: 1 = lowest speed. 6 = highest speed children. 1-6 speed changes randomly to feel the brorword AND REVERSAL (): summer/winte TIMER 1H/4H/8H: preset timer for fan and light to automatically. ie. if timer set at 1H and then presses stop at 4H. Setting default to last press. WIFI BUTTON (): Follow the instructions and p 20 seconds to enter wifi matching mode. 	peed. erly and preeze. er reverse mode. stop 4H, fan will	 FAN OFF (): to switch off the fan. SLEEP MODE : Turn on the fan at an extra create a general breeze. SPEED BUTTON: 1 = lowest speed. 6 = highest NATURAL WIND MODE : designed for the e children. 1-6 speed changes randomly to feel the FORWORD AND REVERSAL (): summer/wir TIMER 1H/4H/8H: preset timer for fan and light t automatically. ie. if timer set at 1H and then press stop at 4H. Setting default to last press. LIGHT ON/OFF : : to switch off the light. CCT : warm white (2700K) / netural white (4000 cool white (6500K)) LED- LED+ : minus "-" = reduces brightness plus "+" = increases brightness 	speed. Iderly and breeze. Iter reverse mode. o stop s 4H, fan will

6* Year Warranty

Visit our website for details https://www.martecaustralia.com.au/warranty-statement/



WARNING

- Installation of fans MUST follow SAA standards and meet local authority regulations.
- Installation MUST be carried out by a qualified and licensed electrician.
- Fan and light MUST be earthed.
- Bracket MUST be firmly attached to a flat solid structure or timber frame.
- DO NOT mix blades from one model to another, all blades MUST be replaced if damaged.
- The warranty is VOID if product is not installed according to this installation guide.



Smart Life matching process, please follow the steps:

1.Download the "Smart Life" APP on your smart devices by scanning the QR code below with camera.



2.Turn on WiFi and Bluetooth on your smart devices. Ensure it's connected to a 2.4GHZ WiFi.

3.Open the APP, follow the steps to register new user account or login existing account.



4.Follow instructions in main manual (steps can also be found on the back of the remote) to put the fan into WiFi pairing mode. If the operation is successful, go to step 5. If the fan has previously been paired or you can't get it to work, please go to step 4 to RESET the fan.

5.RESET the fan. This step is NOT necessary if the fan has successfully entered WiFi pairing mode in the last step, if not, try to RESET the fan: turn on the fan, power off after 10 seconds, power on again after 15 seconds, long press "Fan Stop" for 5 seconds, if "beep beep" are heard, the reset is successful. If "beep beep" is not heard, the reset is failed, please repeat this step.

6.Once the fan has entered WiFi pairing mode, open the APP again on the smart device. Click "Add Device" in the middle or the "+" on the top right of the screen.



7.The auto scan should begin automatically, and the fan should show up at the top of screen within a few seconds.

Note: If the fan is not showing up, you can add it manually by clicking and navigate to: >Add Manually >Small Home Appliance > Fan

1:57 😮			al 🕈 🔳
<	Add	Device	Θ
	ng for new oy o wed parting me	аниясыс Масызаты тар	улг сөлісө
	Add h	fanually	
Electrical		Buesat	
Lighting	1.1	1.1	1.1 #
S.0.0 -	P., BLEIM R	Societ (V3 F1	Societ (2);beet
Large Home Applances	1.1	1.1	11
Sma Hiloma Apo lances	Social ISLL	Diarbend Plug (2.407 u.Sotthe)	Sadal (NB-0-1
Elizhon Apo imeas	1.1 n Scool		
Forna se 6. Health	(pether)		
Camera 8 bezk		Powie Slogi	
Gatecory Concro	- VV	- VV	. vv
Outerour Trave	isker Saip (BLE) W. Hj	Obvior Sarp (Val F4	Control Sup (Dytes)



